

Amusement Button





1 SoundClip/VideoClip Configuration


Used alongside our media players, allows visitors to activate content via buttons.


- 2 Colour Options
 Available in White, Green and Red.
- 3 High or Low Profile
 Supplied with a
 removable high profile
 fixing, allowing for a low
 profile flush fit.
- 4 Lock Nut
 Lock your Button into
 place with the provided
 nut.


Options

Bulb Type
As standard the button is supplied with an incandescent bulb.
Upgrade to an LED for an additional cost.

Technical Information

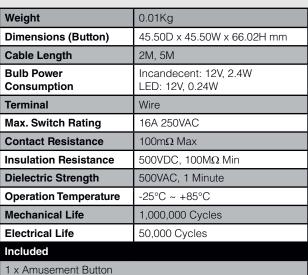

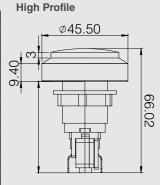

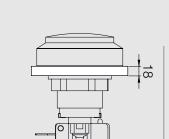


Max. Panel Thickness


 $\overline{\infty}$


Max. Panel Thickness

 Suggested Panel Cutout




Aerial View - Button

 

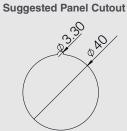



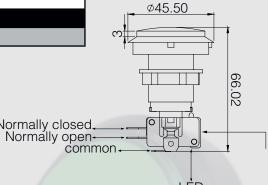

Normally closed. LĖD

Blue* Connector + Black Wire With White Stripe = Positive LED Blue* Connector + Black Wire With No Stripe = Negative LED

> Red Connector With Stripe = Normally Closed / Open Red Connector With No Stripe = Common



Changing the Bulb

Seperating the Button and Bulb - Twist right Fitting together - Line the insert with the button, and twist left

Related Products









