



Magnetic Door Sensor



1 Magnetic Sensor
Use the Magnetic Door Sensor to trigger content on a media player.

2 Trigger Content when together
If using with our Media Players, you can trigger content when the blocks come together by connecting to 'N.O.'.

3 Trigger Content when apart
If using with our Media Players, you can trigger content when the blocks come apart by connecting to 'N.C.'.

4 Connect to Button Input
To enable device activation, you must wire to both the 'COM.' and one of the above triggering options.

5 Fixing Wings
The Blocks can be mounted using the attached fixing wings and fixing screws.

6 Perfect with our Media Players
The Magnetic Sensor works well alongside our range of Audio & Video Players. When purchased alongside one, you will receive a connection cable.

Technical Information

Connecting to one of our Audio/Video Players

When using the sensor with our SoundClip or VideoClip players you will be supplied an easy to use connection cable which is compatible with your specific device.

Depending on how you want the read sensor to work, you will need to connect one end of the cable to the N.C or N.O output, and the other end to the devices button input.



Normally Closed

Connect so when blocks open, content will start.

Normally Open

Connect so when blocks close, content will start.

Connecting to your own Device

If you wish to connect to your own device, we recommend you check the compatibility with us first.

Unit Weight	0.17Kg (Blocks)
Unit Dimensions	15.4D x 55W x 12.2H (Terminal Screw Block) 12.2D x 55W x 12.2H (Magnet Block)
Max Power	3W, Max Voltage: 30V, Max Current: 0.25A
Colour	White
Material	ABS
Switch	N/O and N/C
Included	1 x Magnetic Sensor, 1 x Terminal Connector Cable (Optional)

Related Products



SoundClip-2



VideoClip-HD8



SoundClip-8



SoundClip Battery



Email: sales@blackboxav.co.uk
Tel: +44 (0)1639 874100